

HOW TO USE THE WOLVERINE FILM TO DIGITAL CONVERTER

Plug in and turn on device with one push of the power button



1



Select an Insert

Pick the black plastic insert that best matches your film type. The slide adapter is shown in the photo above.

2

Memory/Storage

Insert USB flash drive, SD card, or connect a personal device using HDMI cable

3



Load media

The menu will allow you to select film type by size such as: 135 for regular 35mm film negatives. All media must be loaded manually and pulled through the insert. There is no automation.

4

Save a photo

To Save an image, press the Convert/Mode button.

A disc/save button will appear, then click "OK"

5



FYI:

- Inserts/adapters: There are five (5) black plastic inserts to choose from.
 - Each has an arrow embossed on the top (Find the **THIS SIDE UP** notation.)
 - This arrow has a matching arrow on one of the two slots that accepts inserts. The incorrect side has an arrow that is X-ed out.
- Media:
 - If your slide/film appears upside down on the screen, press the Right/Flip button below the power and OK buttons.
 - To Save an image, press the Convert/Mode button. First button on the top row on the left. Then click OK button, third to the right. ©